

Weatherproof Rearview Backup Camera System
Color 10" LCD Monitor (with 4 cameras)
For Van, Truck, Trailer & Bus System
PLCMTR104



www.pyleaudio.com

Before operating the Monitor, please read this manual thoroughly and retain it for future reference.

QUAD MONITOR

10. "Quad monitor


- 1. Sun shade
- 2. Bracket knobs
- 3. Bracket
- 4. LCD screen
- 5. Menu
- 6.CH 1


- 7. CH 2
- 8.Power
- 9.CH 3
- 10. CH 4
- 11. Mode switch
- 12. R/C window



Please disconnect your automobile's battery, and then take the wiring harness that plugs into your monitor. There should be a red, black, brown, green, blue and grey wires coming from the small black box at the end of the wiring harness. Attach the black wire to your vehicles metal body or any available ground wire. Attach the red wire to any available ignition controlled positive 12V power source, most likely located at the fuse box. Connect the green, blue and grey wires to the positive wire corresponding to the associated light signal. Please see below wiring diagram for all threaded locking cable connections between cameras and monitor.


CONNECTION

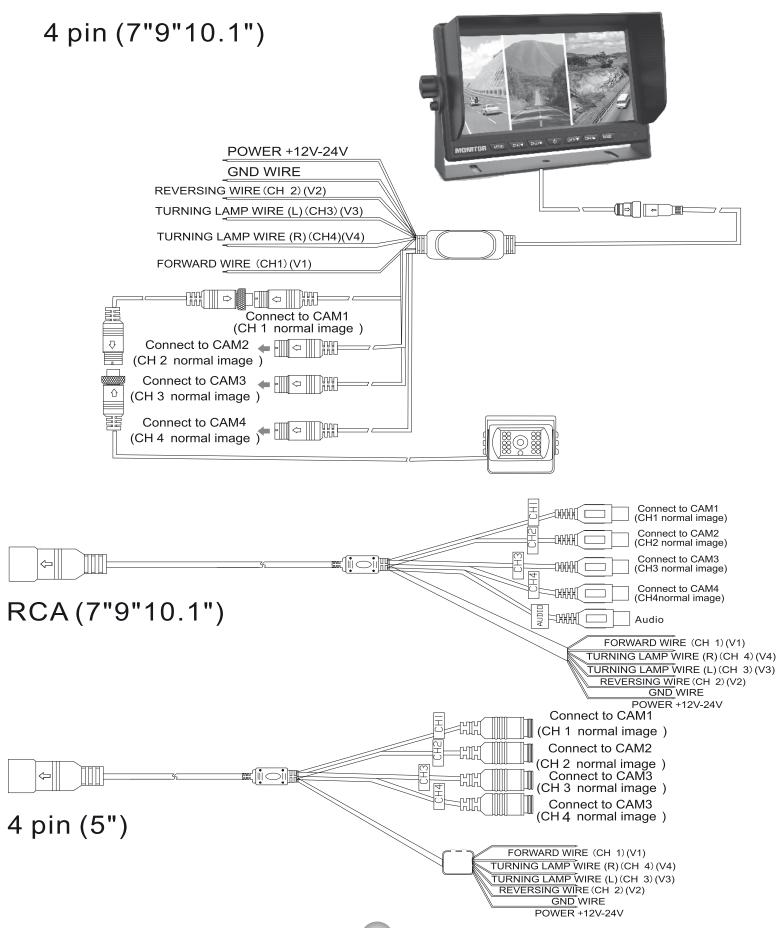


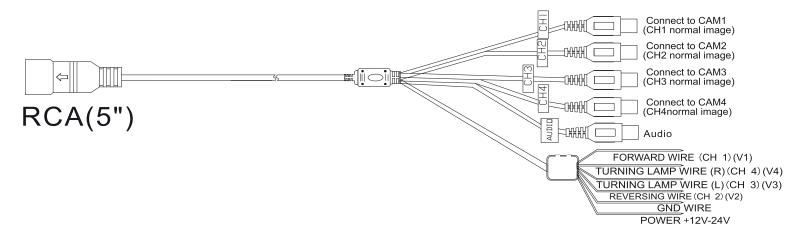


Monitor Standard Installation


1.Removel the screw around then take out the monitor. Put U type brac -ket to the right place and adjust, prepare 3 screws.(see below pictures)

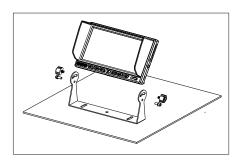

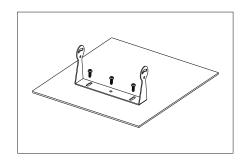



2.Locking the bracket by screws. Put the monitor into bracket, adjust angle and locking it. (see below pictures)

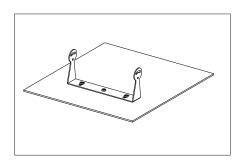

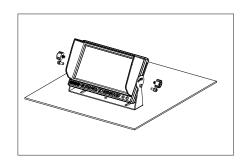


3. Finish installation. The adjustable angel is forwad 30° and backward 30°. User can adjust a suitable angle by themself. (see below pictures)

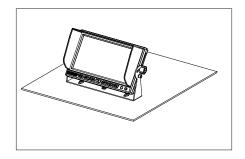

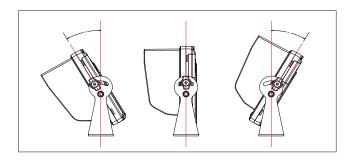



Monitor Installation(Optional)

1. Firstly please fix the screws with and let fan shaped bracket tight, (see below pictures)

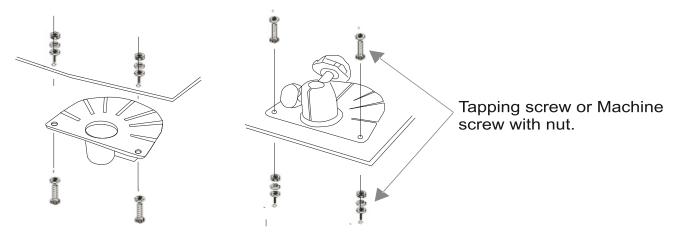


- 2. Secondly put the metal buckle piece on the top of the fan-shaped bracket into the notch at the back of the monitor. (see below pictures)
- 3. Move the bracket to the proper location. (see below pictures)

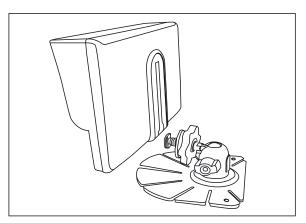


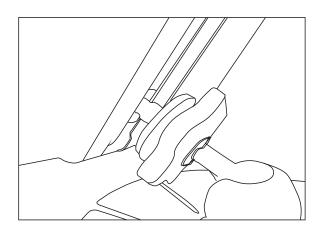


4. To fix the big screws of the bracket until to keep the monitor tight (see below pictures)

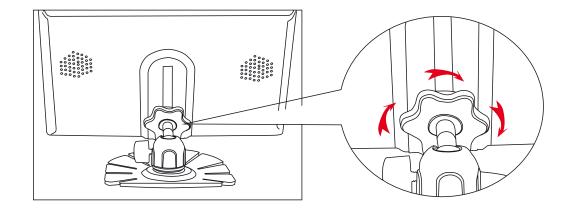

5. If users want to change the direction or angle of the monitor, firstly to loosen the screws on the bottom of the bracket. Then move the monitor to the desired location then fix the screws on the bottom of the bracket again. (see below pictures)

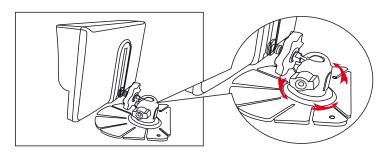


Accessory

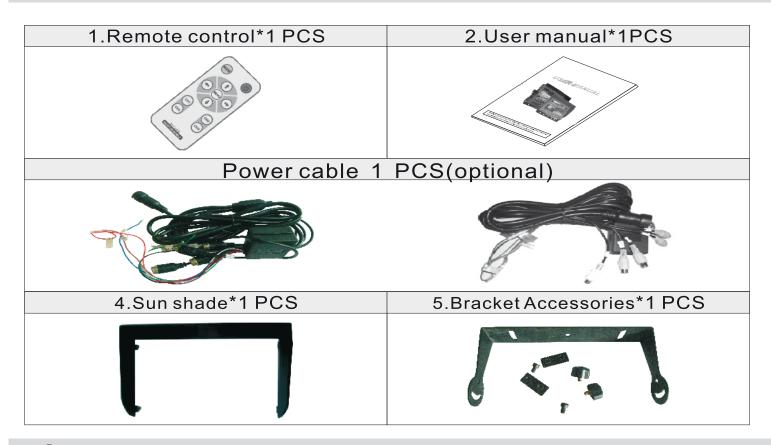

Announcements

To ensure our safety, the driver should not watch the video files or operate the monitor. The amateurish workers should not disassemble it without permission. If there are any product problems, please consult the local after-sales agency or take the defective product to the local maintenance department for repairing. Warning: Please obey the local laws to install the product at a right position. Our company is not responsibility for the law issue caused by the illegal installing. Attention: When the weather is very cold. The LCD may be dark with power on. After the temperature will increase gradually, the LCD should be back to normal.

Examples for installstion

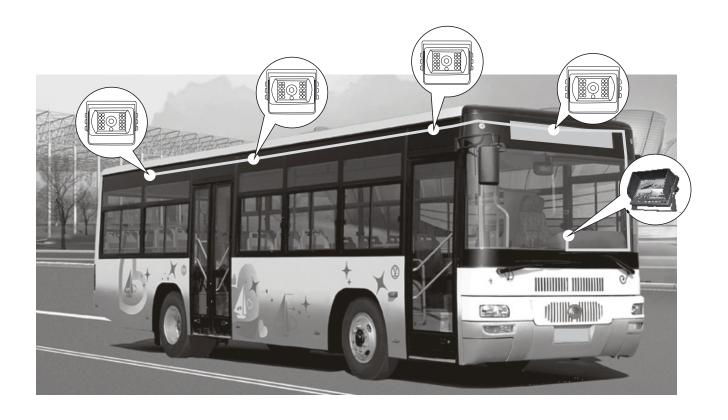



Monitor system use in truck, bus, express car, special vehicle