
WORKUP

INSTALLATION / OWNERS MANUAL

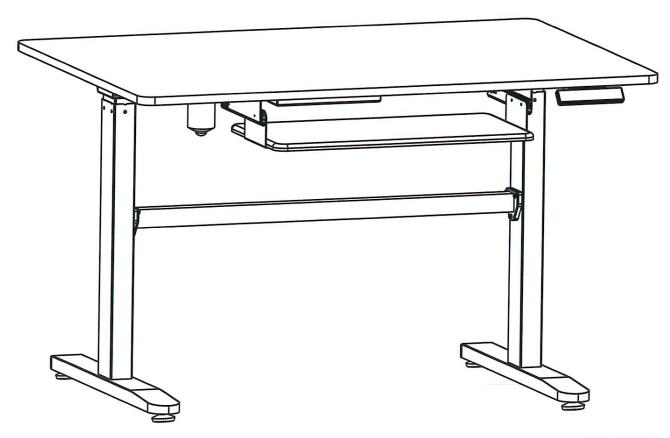

MODEL: XAFD-A1

NEED HELP? CONTACT US: Monday – Friday, 9 am – 5 pm PST 657-341-0362 or Email us: cs@scsources.com

WorkUP Supply Chain Sources LLC., 339 N Berry St., Brea, CA 92821 scsources.com 657-341-0362



CAUTION / INFORMATION

NEED HELP? CONTACT US: Monday – Friday, 9 am – 5 pm PST 657-341-0362 or Email us: cs@scsources.com



Make sure there are no obstacles in the desk's path. Make sure the desktop is not touching any walls.



Make sure all cords are the appropriate length in order to accommodate the change in height of your desk.



Keep children away from fully electric standing desks, control boxes, and controllers. Risk of injury or electric shock.



Keep all electrical components away from liquids. Especially when cleaning the desk.



Do not sit, stand, crawl or lie on or under the stand desk frame.



Do not place any objects taller than 20" underneath the stand desk.



Do not open any of the electric components - Digital Controller, Motor Box. Risk of injury or electric shock.



Do not fully tighten screws until completely assembled.



Place desk on a level surface during operation, installation, and assembly.

TOOLS YOU MAY USE (NOT REQUIRED) - 2 PERSON RECOMMENDED



Screwdriver



Drill



Allen Bit



2x persons



Desk Frame Assembly

Layout **DESK FRAME** facing down onto a flat surfcace.


Assemble the **DESK BODY TO FRAME MOUNTS** on each side of the **DESK FRAME**.

Attach on each side using the provided allen wrench and (N) screws 2x on each side.






Allen Wrench H x 1 N x 4 (M6 x 12)

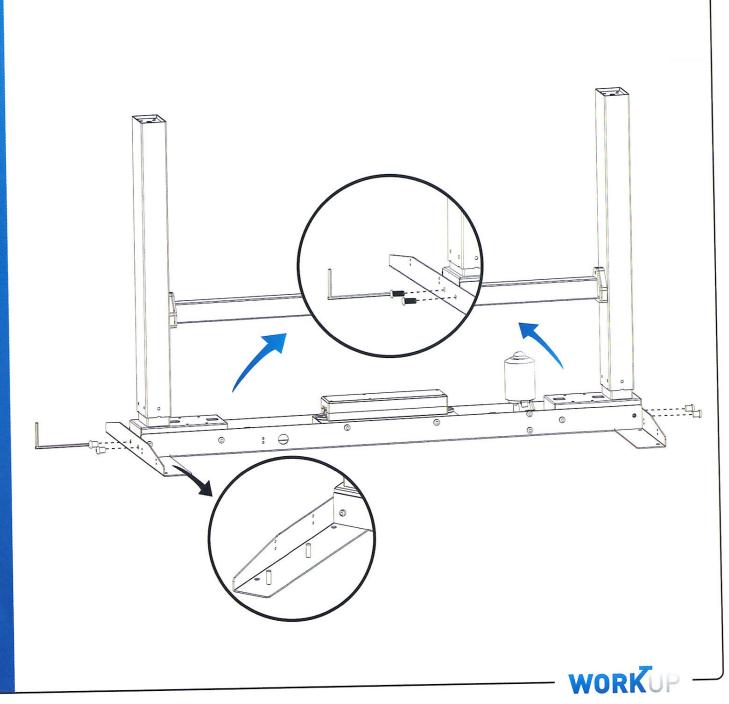


PARTS

 

1. Desk Body



2. Feet x2

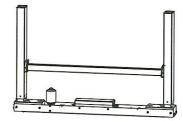

3. Desk Frame



 
4. Control Panel



5. Keyboard Tray Bracket x2



6. Keyboard Tray



7. Control Wiring



8. Desk Body to Frame Mount x2

HARDWARE



Allen Wrench H x 1



N x 14 (M6 x 12)



P x 8 (M6 x 40)



Zip Tie (K x 3)



Q x 8 (4 x 10)



Screwdriver (G x 1)



Wingnut (M x 2)



Desk Leg Assembly

Align each **DESK LEG** onto the **DESK FRAME**.


Attach on each side using the provided allen wrench and **(P)** screws **2x** on each side.

NOTE:

Install the bolts in a diagonal pattern to ensure all the holes are aligned before fully tightening.



Allen Wrench H x 1 P x 8 (M6 x 40)

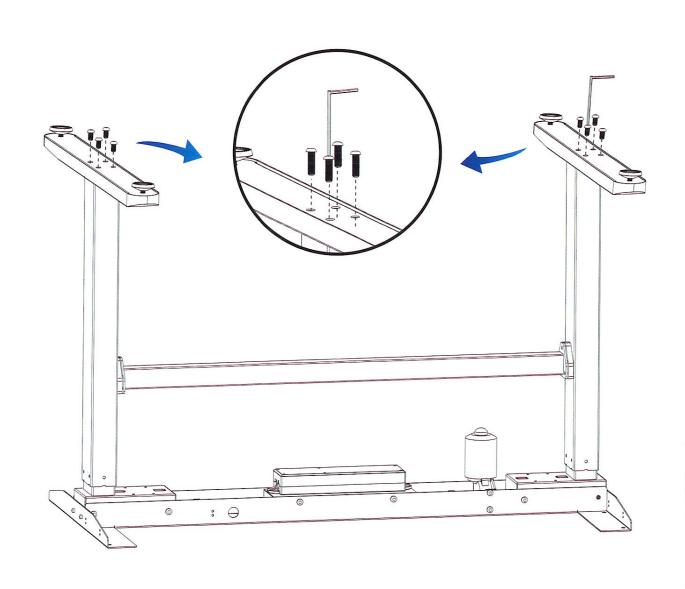



Desk Frame to Body Assembly

Place the **DESK BODY** facing down onto a flat surfcace. Gently align the **DESK FRAME** on top of the **DESK BODY** matching the pre-drilled holes.


Attach on each side using the provided allen wrench and **10x** (**M**) screws.





Allen Wrench H x 1

N x 10 (M6 x 12)

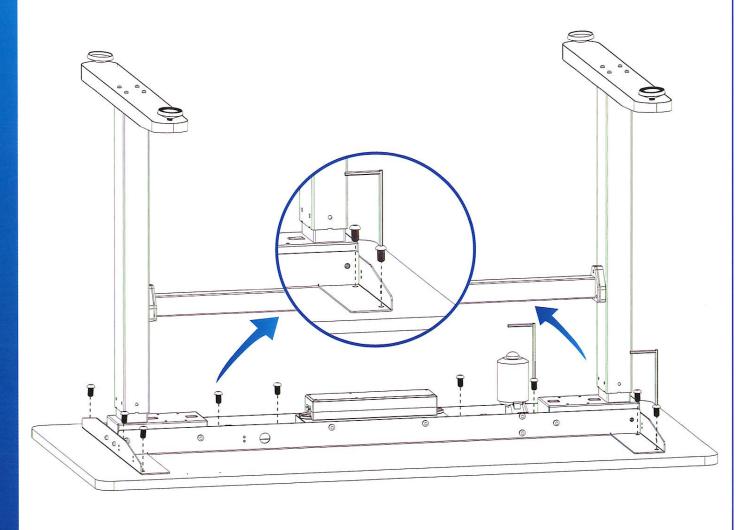



22 KI

STEP 4


Keyboard Bracket Assembly

Align each KEYBOARD BRACKET onto the DESK BODY.

Attach using the predrilled holes and (**Q**) screws 3x on each side.





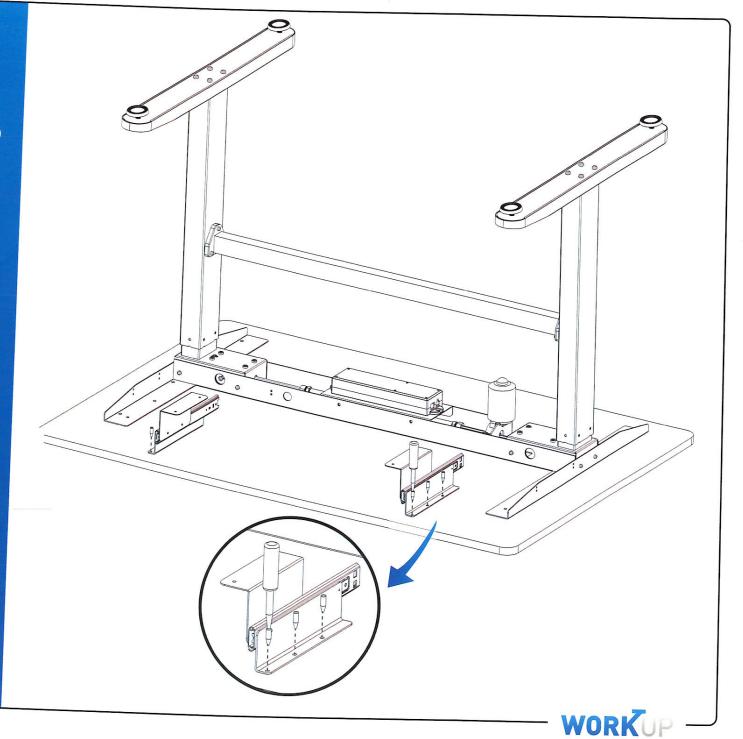

Desk Tray Assembly


Align the KEYBOARD
TRAY with the predrilled holes on the
KEYBOARD BRACKETS

Attach on each side using the provided screwdriver and (Q) screws, 2x on each side.





Screwdriver G x 1 Q x 4 (4 x 10)

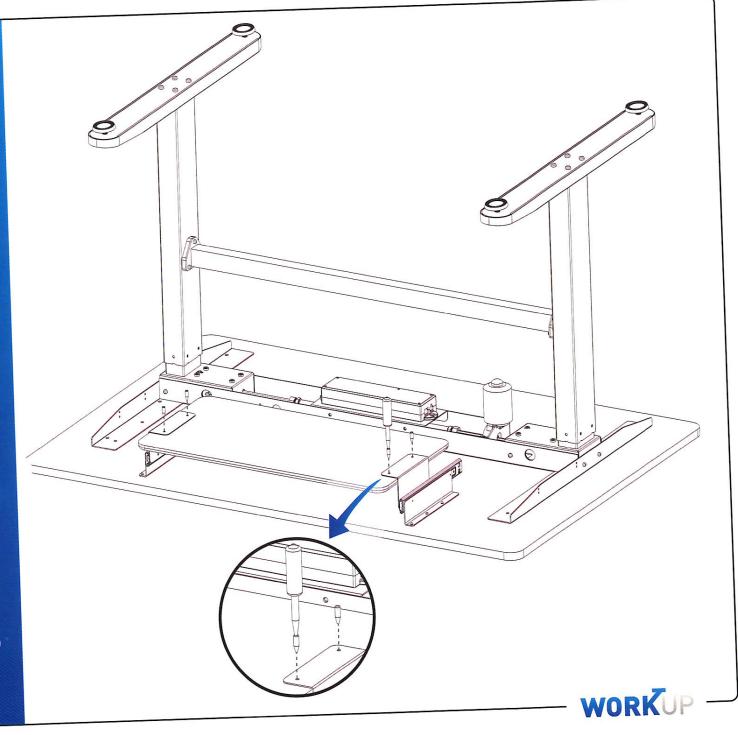


Control Panel Assembly

Align the **CONTROL PANEL ASSEMBLY** with the pre-installed bolts.

Fasten the wingnut (M) onto each bolt.



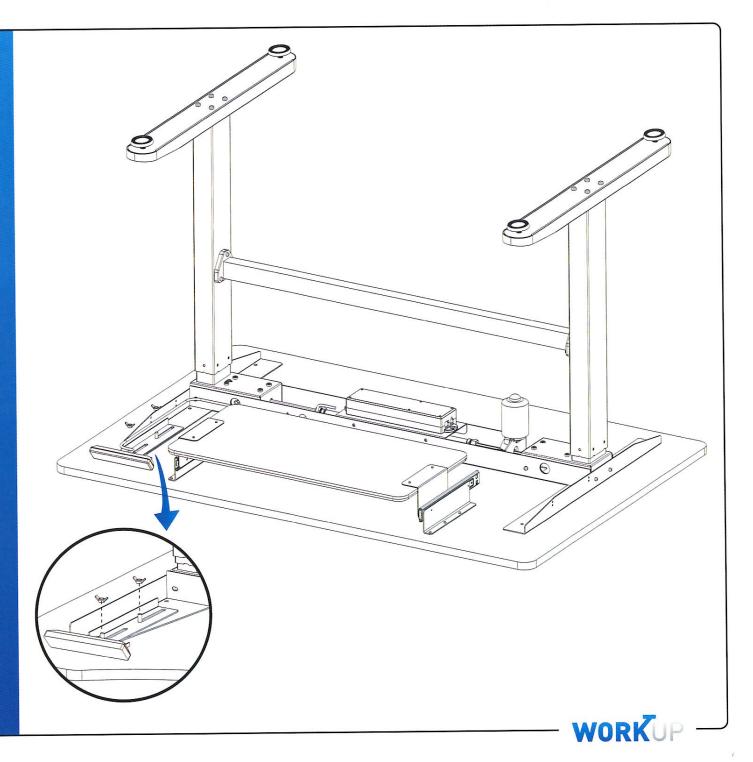


Control Panel Wiring Assembly

Once the control panel is bolted in place you can neatly secure the loose wire using the provided zip-ties

Using a (K) zip tie to restrain the cord through the pre-drilled holes.



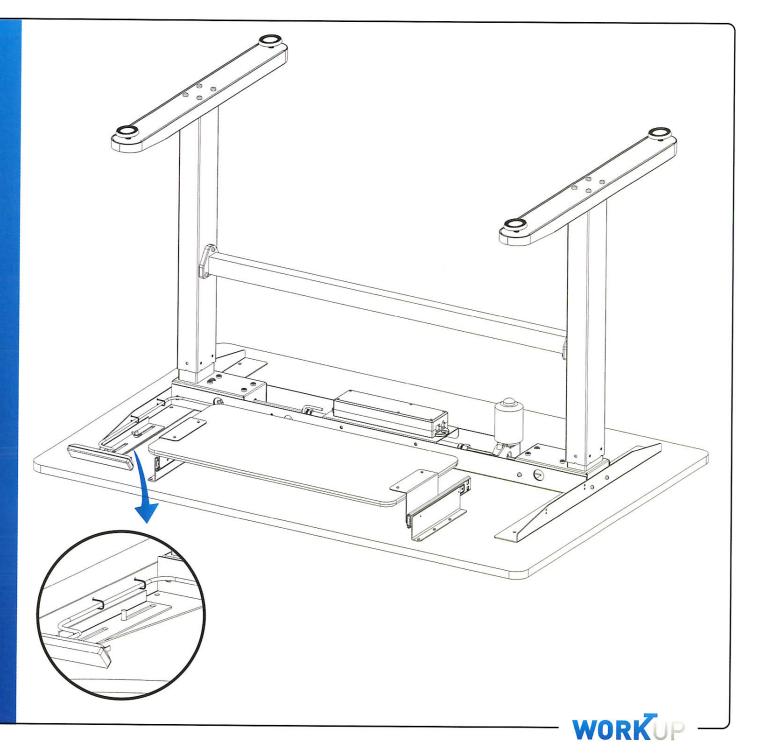


Power Wiring Assembly

PANEL and the desk motor box to the power board using the CONTROL WIRING.

An audible click will be heard when each control wire is securly in place.

Go back and ensure all the screws and bolts are fully tightened!

Carefully flip your desk. We recommend using a second person to avoid damage.

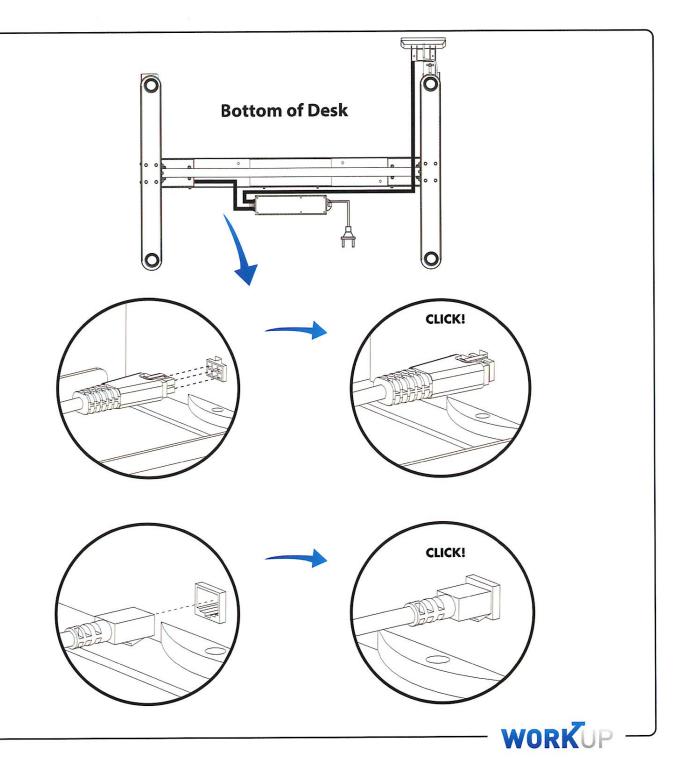

NEED HELP? CONTACT US: Monday - Friday, 9 am - 5 pm PST 657-341-0362 or Email us: cs@scsources.com



Plug the power cord into a 120v/60HZ outlet, the LED screen will display the initial minimum height in inches.

1. Height Adjustment:

INCREASE the desktop height. Press and hold the "UP"



button, release to stop.

DECREASE the desktop height. Press and hold the "DOWN" button, release to stop.



2. Set Memory Height:

- a. select your prefered height using the above operation.
- b. press the "SET" button "S" S the LED screen will display "SET"



- c. select an unused memory, 1 2 3 to set the height.

- d. select a set height memory by pressing 1 2 3 the desk will automatically adjust to the height.

3. Troubleshooting / Error Codes:

indicates a loose motor wire. Unplug the unit first, then check the wire assembly for loose wires and secure them.



indicates an overheated power cord. Unplug the unit from the electric outlet and allow to cool.

