

# REMINGTON®

## PRECISION POWER BEARD & HAIRCUT TRIMMER

HC5150, HC5350,  
HC5550 & HC5750

### Use and Care Guide



**REFRESH YOUR LOOK**

Scan the QR code to check out our weekly man-style tip to keep you looking good! or visit [RemingtonProducts.com/ManStyle](http://RemingtonProducts.com/ManStyle)

Join us for special offers, grooming tips and product news.

@RemReadyMan

Facebook.com/RemingtonReady

### Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits: Proof of Ownership • Product Protection • Product Registration • Special Offers

Register online at: [www.RemingtonProducts.com](http://www.RemingtonProducts.com)

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following; read all instructions before using this appliance.

### DANGER

To reduce the risk of electric shock:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.

### WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by the manufacturer.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. If any of these things happen, return the appliance to an authorized service center for examination and repair.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.

- Make sure the cord is disconnected from the clipper while storing this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Always attach plug to appliance and then the adapter to the outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the clipper for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- Dispose of used batteries properly. Do not incinerate. Batteries may explode if overheated. Do not wrap in metal or aluminum foil. Wrap in newspaper before discarding. It is suggested that you contact local battery redemption site(s) in your area.
- Do not run the product when charging via USB port on a PC. (For USB charging models only)

### Product Features


Remington® Beard & Hair clippers provide a quick and easy way to maintain professional-looking haircuts and facial hair at home. Developed to combine professional grade blades with the flexibility of cord or cord free use, this hair clipper enables you to achieve customized, modern looks and traditional hairstyles. To help you create those styles, and to extend the life of your hair clipper, please read all instructions before using.



## SAVE THESE INSTRUCTIONS

Feature	HC5150	HC5350	HC5550	HC5750
<b>Power System</b>	cord/cordless	cord/cordless	cord/cordless	cord/cordless
<b>Full Charge Time</b>	14 – 16 hrs.	14 – 16 hrs.	14 – 16 hrs.	14 – 16 hrs.
<b>Runtime</b>	30 mins.	40 mins.	40 mins.	40 mins.
<b>Indicators</b>	Charging	Charging	Charging	LCD
<b>Stubble Comb</b>		x	x	x
<b>Beard Comb</b>	x	x	x	x
<b>Haircut Comb</b>			x	x
<b>USB Charging</b>		x	x	x
<b>Texturizer</b>		x	x	x
<b>Click N' Wash</b>		x	x	x
<b>Turbo Boost</b>			x	<b>Auto Boost</b>
<b>Blade Coating</b>			<b>Titanium</b>	<b>Titanium</b>
<b>Anti-Slip Grip</b>			x	x
<b>Storage Bag</b>			x	x

### Attaching Adjustable Guide Combs

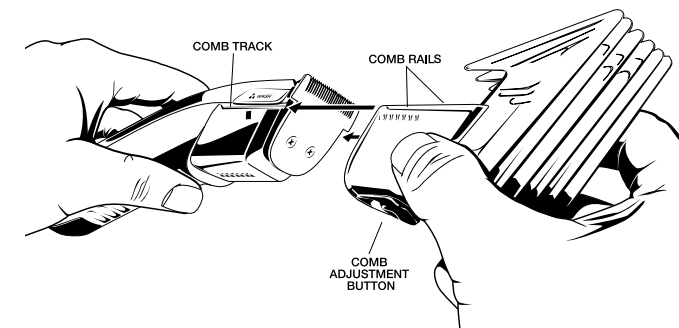

To attach comb to clipper, align both comb rails with the comb tracks on both sides of the clipper and slide into place. Once comb is secure you will hear a click sound, letting you know it is locked in. Ensure comb is properly secured by pushing down on comb, the comb should not slip. To adjust comb height press down on the comb adjustment button and slide up or down as necessary.

### Hair Length Settings

Stubble Comb:	Beard Comb:	Haircut Comb:
#0, 1/16" (1.5mm)*	#1, 1/8" (3mm)	#8, 1" (24mm)
–	#2, 1/4" (6mm)	#9, 1 1/8" (27mm)
–	#3, 3/8" (9mm)	#10, 1 1/4" (30mm)
–	#4, 1/2" (12mm)	#11, 1 3/8" (33mm)
–	#5, 5/8" (15mm)	#12, 1 1/2" (36mm)
–	#6, 3/4" (18mm)	#13, 1 5/8" (39mm)
–	#7, 7/8" (21mm)	#14, 1 3/4" (42mm)

\* The stubble comb has one length setting and is not adjustable

## How to Use

### Charging Your Hair Clipper

- Clipper must be turned off.
- Insert the adapter plug into the bottom of the clipper and plug the adapter unit into a power outlet. The amber light will glow to indicate that it is charging.
- The clipper will be fully charged in 14-16 hours.
- The batteries cannot be overcharged, but we recommend that charging be discontinued if the clipper will not be used for a long period of time.
- It is advisable not to use this clipper directly from the power outlet when it has been fully charged, but if while using the clipper in cordless mode there is a noticeable drop in power, you can use directly from the power outlet. Never use under water when connected to the outlet.
- If the clipper has not been used for a month or longer, it is advisable to recharge it for 14-16 hours.
- To preserve the life of the batteries, discharge them by running the clipper until the blades move slowly. Switch off and fully recharge. Do this every six months.
- Charge the clipper at temperatures between 40°-90°F.
- Nickel-Metal Hydride batteries included. See battery removal section for proper disposal of batteries.

### USB charging

- Some models are capable of charging via USB port on a PC. Do not run the product when charging via USB port on a PC.

### Hair Texturizer

Simply adjust the hair thinner mechanism by sliding the button at the top of the hair clipper.

- Cut hair to desired length.
- Select a comb attachment on to two lengths shorter than initial comb length and attach to clipper.
- Slide Texture Release button into place, exposing hair texturizer.
- Repeat hair cutting technique in areas you desire to be texturized.

### Auto Boost System (Only for HC5750)

There are 3 settings for the Auto Boost system: Off, Auto and Boost.

- If the clipper is set to Auto it will run at regular power under low load conditions.
- When more power is needed, the clipper will automatically sense and provide maximum Boost.
- If the clipper is set to Boost, it will run at maximum power at all times.

### Dual Boost System (Only for HC5550)

There are 3 settings for the Dual Boost system: Off, On, Boost.

- If the clipper is set to On, it will run at regular power.
- If the clipper is set to Boost, it will provide maximum power

## Cleaning & Maintenance

### Cleaning & Maintaining Your Clipper

After each use:

- Brush the accumulated hair from the cutters. **Do not submerge the clipper in water.**

### Click N' Wash System

The Click N' Wash system is designed to maximize the efficiency of washable cleaning.

- Click the Click N' Wash buttons that are located on the sides of the hair clipper head. The blades will slide out allowing the blade to be easily cleaned under the tap.
- Once the blades are cleaned, lock them back into place by pushing the blade set towards the clipper body. You will hear a "click" when blades are locked into place.

- Do not run the entire unit under the tap, only the blade set is meant to be rinsed in water.
- Add oil, place a few drops of cutter or sewing machine oil onto the blades after rinsing with water.

Note: Ensure that the hair clipper is turned off when cleaning.

**Every six months:**

At regular intervals the blade set should be removed and cleaned. To remove the blade set, remove the two screws holding the large blade to the clipper body. The blade set will separate from the body and can be cleaned as necessary. Brush out hairs from between blades with the cleaning brush. Place a few drops of cutter or sewing machine oil onto the blades. Wipe off excess oil.

**Cleaning Cautions:**

- Do not use liquid cleaners on the cutters or harsh or corrosive chemicals on the cutter casing.
- Unplug the charge adaptor from the power outlet when not in use and when cleaning.

**Storage**

- Always store this appliance and cord in a moisture-free area.
- Do not wrap the cord of the charging adaptor around the appliance.
- Do not store in temperatures above 140°F.

### Troubleshooting

**The clipper does not work when turned on:**

- Clipper must be charged for a full 14-16 hours, or use clipper while plugged into wall.

**Clipper cutters do not move:**

- The cutting unit may be dirty and clogged. Clean the unit as directed in Cleaning & Maintaining section.

**Clipper does not hold charge:**

- Fully discharge battery by running clipper until it stops; then follow recharging instructions (see section on Charging Your Hair Clipper).

U.S. residents: To order accessories, contact us at 800-392-6544, visit us at [www.RemingtonProducts.com](http://www.RemingtonProducts.com), or visit your local retailer.

Canadian residents: To order accessories, please call 800-268-0425 or visit us at [www.RemingtonProducts.com](http://www.RemingtonProducts.com).

## Battery

### Battery Removal

When your rechargeable clipper reaches the end of its useful life, the batteries must be removed and recycled or disposed of properly in accordance with your local and state requirements.

**The following procedure should be followed for battery removal:**

- Ensure device is unplugged from any electrical outlet.
- Remove blade for ease of disassembly and safety by using a phillips screw driver and removing both screws.
- Remove plastic screw plug from underside of unit, located under rating stamp using small flat head screw driver.
- Remove screw located under rating stamp from underside of unit.
- Use flat head screw driver to pry apart the body of the device into its two halves.
- Cut wires from the battery pack.
- Remove battery pack from the device.

## Warranty

### Limited Five-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a five-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, DeForest, WI 53532. For more information call 800-736-4648 in the US or 800-268-0425 in Canada.

**This warranty does not cover products damaged by the following:**

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

**SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FIVE YEARS FROM DATE OF ORIGINAL PURCHASE.**

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

### Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

### *Remington Guarantees Satisfaction After 30 Days!*

**Remington Men's Shave and Groom 60-Day Money Back Guarantee\***

If within 60 days after purchasing any Remington® branded Men's Shave and Groom product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington® and receive a full refund.\*\* For questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

\*\*Terms and conditions apply.

### Terms and Conditions

1. Refund will be in the form of a check issued in US Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington® and postmarked no later than 60 days after purchase of the Remington® branded Men's Shave and Groom product:
  - a. The Remington® product;
  - b. The original sales receipt indicating price and date purchased; and
  - c. The completed 60-day money back guarantee form located at [RemingtonProducts.com/60day](http://RemingtonProducts.com/60day).
3. In addition, Remington®, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:  
Remington 60-Day MBG  
507 Stokely Drive, Box 1  
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

\*Applies to US and Canadian customers' returns only.

**Questions or comments:** Call 800-736-4648 in the US or 800-268-0425 in Canada or visit [RemingtonProducts.com](http://RemingtonProducts.com).

Dist. by: Spectrum Brands, Inc., Madison, WI 53711

Dist. by: Spectrum Brands Canada Inc., Mississauga, ON L5L 0A1

REMINGTON is a registered trademark of ROVCAL, Inc., a subsidiary of Spectrum Brands, Inc.

© 2012 ROVCAL, Inc.  
12/12 Job# 2012-9-20\_105

**Manufactured to Remington's specifications in the PRC.**

**T22-31022**

120 VAC 60 Hz listed adaptor

