

Geometric Square Fire Pit, 26-inch

Foyer Carré Géométrique, 66 cm

Quadratische Feuerstelle mit geometrischem Design, 66 cm

Focolare Quadrato Geometrico, 66 cm

Pozo de Fuego Cuadrado Geométrico, 66 cm

Geometrische Vierkante Vuurschaal, 66 cm

幾何学模様ファイアピット、66 cm

B07MQVJ8R1

English	
Français	
Deutsch	
Italiano	
Español	
Nederlands	
日本語	
	English ..... 3
	Français ..... 5
	Deutsch..... 7
	Italiano ..... 9
	Español ..... 11
	Nederlands..... 13
	日本語 ..... 15
	Contents • Contenu • Inhalt • Contenuto • Contenido • Inhoud • 内容 ..... 18
	Assembly • Montage • Montage • Montaggio • Montaje • Montage • 組み立て ..... 19

 
## IMPORTANT SAFEGUARDS



Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

When using the product, basic safety precautions should always be followed to reduce the risk of injury including the following:

**⚠ DANGER** **Risk of carbon monoxide poisoning!** Do not use indoors! OUTDOOR USE ONLY. Do not use in a confined and/or habitable space e.g. houses, tents, caravans, motor homes, boats.

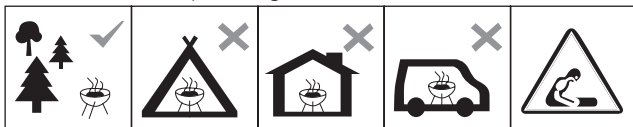

**⚠ WARNING** **Risk of fire!** It is not recommended to use this product on a wooden or flammable surfaces. If you intend to use this product on a wooden deck, or other surface that is not heat-resistant, use heat-resistant material such as concrete pavers, brick or stone between the product and the surface.

**⚠ WARNING** **Risk of explosion!** Do not use gasoline, kerosene, diesel, fuel, lighter fluid or alcohol to light or relight fires.

**⚠ CAUTION** **Risk of burns!** Keep children and pets away.

**⚠ CAUTION** **Risk of cuts!** Product have sharp edges. Wear protective gloves when assembling the product.

- This product is intended for household use only.
- This product must be assembled by a competent adult.
- Do not let children climb on or play with the product.
- Do not use in windy conditions without the mesh lid.
- Place the product on a firm, flat, level, heat-resistant, non-flammable surface away from flammable items, such as wooden fences or overhanging trees.
- When placing the product, keep a minimum distance of 2 meters (7 feet) around it, including overhead.
- Do not place hot parts of this product (for example mesh lid or log poker) onto flammable surfaces such as wooden deck or furniture.
- Do not move the product while the fire is burning as it becomes very hot during use.
- Always use heat-resistant protective gloves when handling this product.
- Do not leave this product unattended when fire is burning.
- Do not store flammable materials near this product.
- Do not use aerosols near this product.
- Keep a fire extinguisher close by when using this product.
- Only burn seasoned dry wood or designated fire logs, which burn longer, and more efficiently than standard wood.
- Never burn green wood, construction waste, plastic, garbage, or yard waste. They create more smoke and can be toxic.
- Take extra care if you live in a region where bush fires are of concern.
- Some local governments have adopted ordinances to restrict backyard recreational fires. For more information, check with local authorities.

## Use

**⚠ CAUTION** **Risk of burns!** All parts of the product become hot during use. Always wear heat-resistant protective gloves and use the log poker (H) when removing the mesh lid (A), poking fire logs and/or handling hot parts.

- Place the fire logs inside the fire chamber (B).
- Cover the fire with the mesh lid (A).

## Lighting

1. Make sure there is only a small amount of ash in the bottom of the fire chamber (B).
2. Place a natural fire starter (for example paraffin wax) into the center of the fire chamber (B).
3. Place a layer of dry seasoned dry wood that is cut to lengths no more than 3/4 the width of the fire chamber (B).
4. Use a match to light kindling or fire starter.
5. Add fire logs once fire is well set.

**⚠ WARNING** **Risk of explosion!** Do not use gasoline, kerosene, diesel, fuel, lighter fluid or alcohol to light or relight fires.

## Tending the fire

- You may need to shift and/or add fire logs for an ideal experience.
- Wait until glowing coals have developed before adding any additional fire logs.

## Extinguishing

1. Allow fire to burn itself out or douse with sand.
2. Do not use water to extinguish the fire.

## Cleaning and Maintenance

**⚠ CAUTION** **Risk of burns!** Do not clean or maintain this product until it has cooled completely.

**NOTICE** This outdoor fire pit should be inspected regularly to ensure product safety and longer product life.

## Cleaning

- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.
- To clean, wipe with a soft, slightly moist cloth. Use a mild dishwashing detergent or baking soda.
- For stubborn surfaces, use a citrus based degreaser and a nylon scrubbing brush.
- Remove tar deposit with a chimney cleaning product.
- After cleaning, rinse the product with clean water and let it dry.

## Maintenance

- Check the components regularly to make sure all screws and bolts are tightened.
- Do not use this product if any parts are missing, are damaged or worn.

**NOTICE** This product is made to resist premature rusting. However, eventually, all metals will corrode. It is a normal phenomenon that the paint of the fire pit peels off after the product is used several times. Some environments promote premature rusting of metals. For best results, at the first sign of rust or other corrosion, use an emery cloth, metal-grade sandpaper or a rotary tool to buff away the blemish and touch up the spot with rust-resistant spray paint available at local hardware stores.

## Storage

- Store assembled in a location away from children and pets.
- If you store the product outdoors, cover it with the protective cover (I) to protect it from the weather.

## Specifications

Dimensions (W x D x H): approx. 26 x 26 x 24.5 in (66 x 66 x 62 cm)

Net weight: approx. 29 lbs (13.2 kg)

## Feedback and Help

Love it? Hate it? Let us know with a customer review.

AmazonBasics is committed to delivering customer-driven products that live up to your high standards. We encourage you to write a review sharing your experiences with the product.



 
 
 
 



**US:** [amazon.com/review/review-your-purchases#](https://amazon.com/review/review-your-purchases#)

**UK:** [amazon.co.uk/review/review-your-purchases#](https://amazon.co.uk/review/review-your-purchases#)



**US:** [amazon.com/gp/help/customer/contact-us](https://amazon.com/gp/help/customer/contact-us)

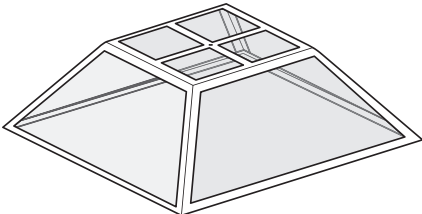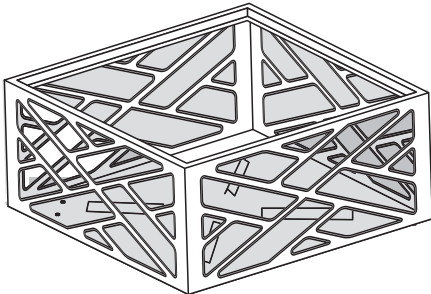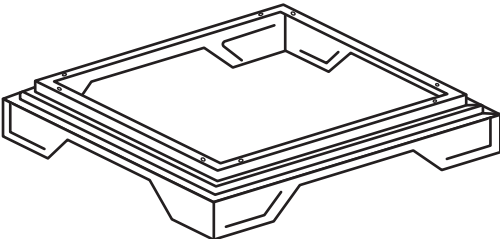
**UK:** [amazon.co.uk/gp/help/customer/contact-us](https://amazon.co.uk/gp/help/customer/contact-us)

A		x1
B		x1
C		x1
D		x8
E		x1
F		x1
G		x1


You will need / Vous aurez besoin de / Sie benötigen / Sono necessari / Necesitará / Je zal nodig hebben / 必要な物:



 
1:

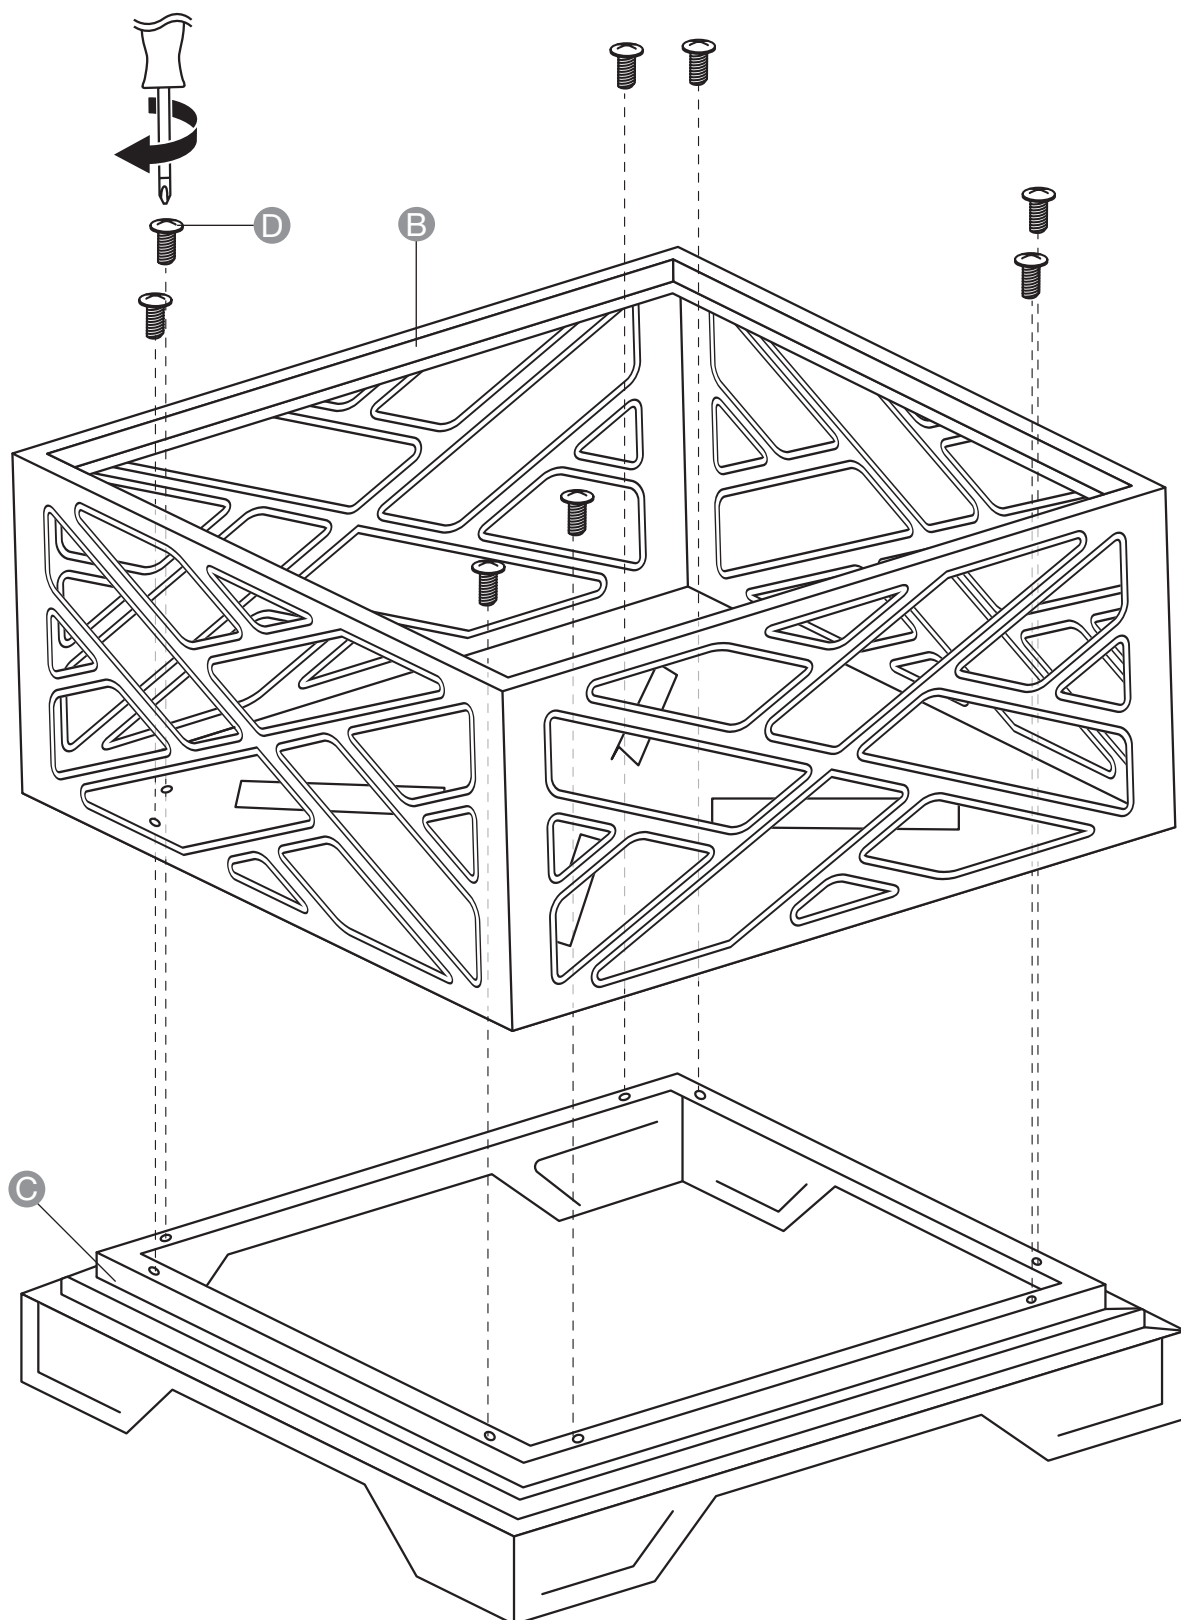

| 2:

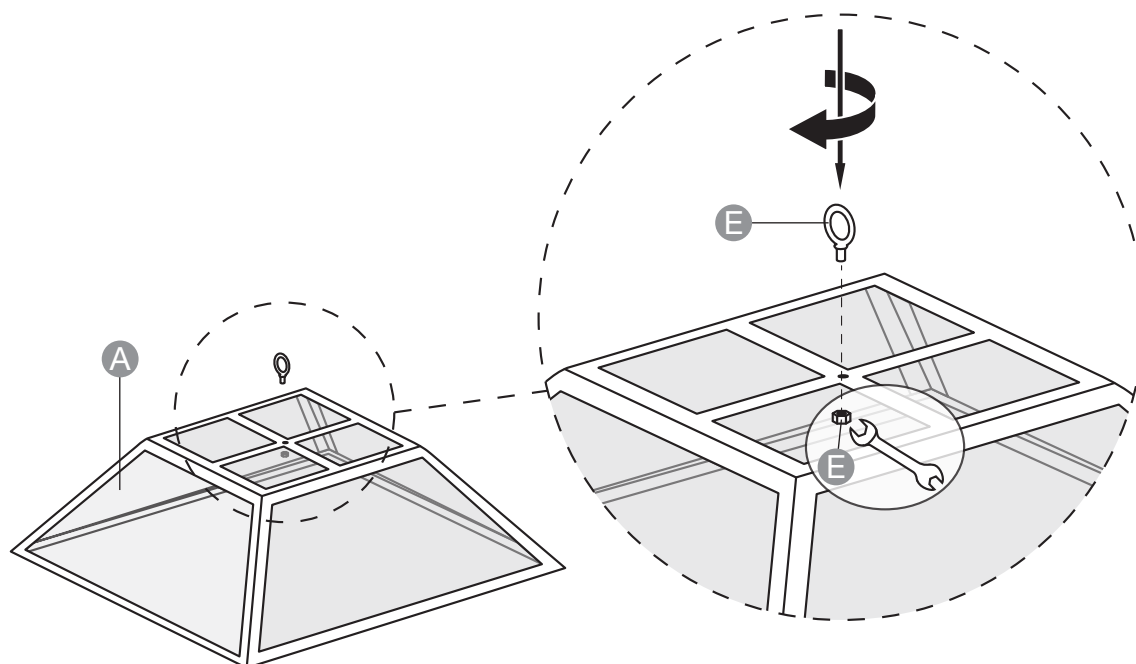 

| 3:

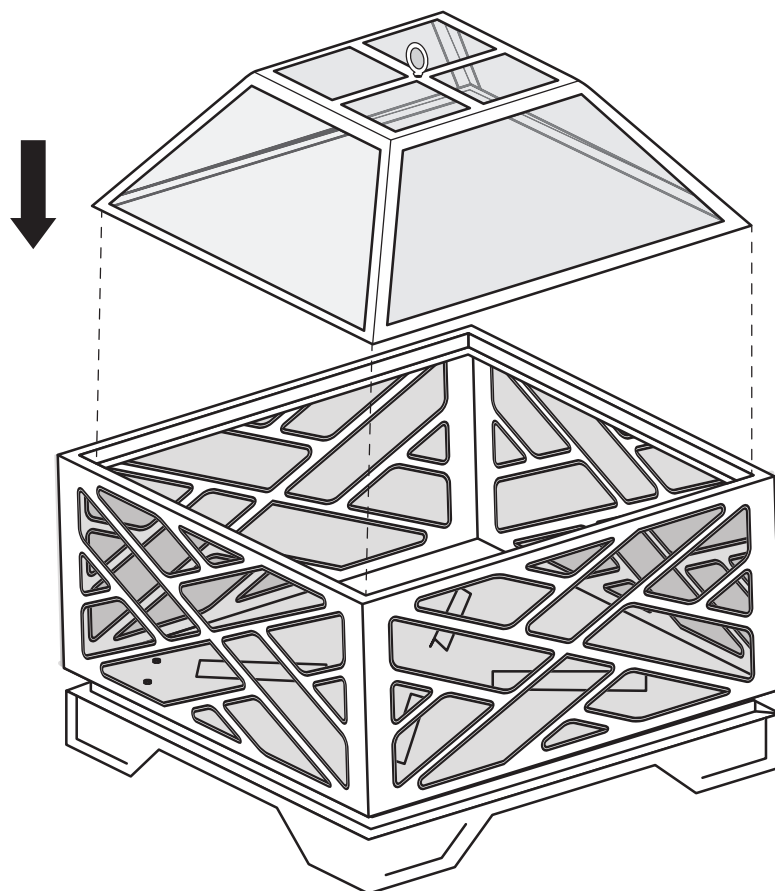 

# amazonbasics

[amazon.com/AmazonBasics](https://amazon.com/AmazonBasics)

MADE IN CHINA

FABRIQUÉ EN CHINE

HERGESTELLT IN CHINA

PRODOTTO IN CINA

HECHO EN CHINA

GEMAAKT IN CHINA

中国製