

Instruction, Use & Care Manual

Please save this manual for future reference.

Thank you for purchasing this Winsome House product. This product has been manufactured with the highest standards of safety and quality.

Product Name:	Expandable Water Hose with Water Spray Nozzle Attachment
SKU #:	WHGS435 (50ft. GREEN), WHGS436 (50ft. BLACK), WHGS437 (75ft. GREEN), WHGS438 (75ft.
	BLACK)

Operating Instructions



BEFORE USING THIS PRODUCT: READ, UNDERSTAND AND FOLLOW THESE INSTRUCTIONS.

- Expandable Hose must be attached to a spray nozzle or ball valve (both included) in order to expand and function properly.
- Before use, make sure that all rubber washers are inserted into the coupling side of the hose and sprayer.



<u>Caution</u> Do not over tighten couplings. It is recommended to hand tighten to a snug fit. Over tightening may damage the washer and coupling.

- Fasten the spray nozzle to the hose and attach the other end of the hose to the outside spigot.
- Gradually turn the water on and allow the hose to expand to full length. The expandable hose is now ready for watering tasks.
- When finished, turn the water off at the spigot first, squeeze spray nozzle and allow the water to drain. The hose will retract to its original size.
- If the hose is attached to an oscillating sprinkler, the hose may gently drag the sprinkler as it retracts when the water is turned off.
- Ground sprinkler application: Remove the spray nozzle and attach the hose to any outdoor sprinkler. Face the sprinkler away from you and others before turning on water. Slowly turn the water on. As the hose expands, place your sprinkler in its desired location.
- Turn the ball valve (included) to the off position. Then turn the water on at the spigot and let the hose fully expand. Fasten the valve to the sprinkler. With the valve still in off, place the sprinkler in the desired location. Make sure to face the sprinkler away from you and others and then turn the valve on.



Instruction, Use & Care Manual

Please save this manual for future reference.

Product Name:	Expandable Water Hose with Water Spray Nozzle Attachment
SKU #:	WHGS435 (50ft. GREEN), WHGS436 (50ft. BLACK), WHGS437 (75ft. GREEN), WHGS438 (75ft.
	BLACK)



Please read the following important information about your new Expandable Hose.

- The expandable Hose must be used with a sprayer or the ball valve (included) attached. The hose will not expand without one of these in place.
- The expandable Hose is intended for outdoor use only; do not use the hose inside.
- The expandable Hose should never be used for potable water use, do not drink from the hose or use the hose to supply drinking water. An outdoor hose may be exposed to conditions that can be hazardous to human health.
- The expandable Hose is not intended for hot water use. Do not run hot water through the hose.
- The expandable Hose is a general outdoor water hose. Do not stretch the hose or use the hose for any other purpose than standard outdoor watering tasks.
- The expandable Hose is intended to expand only with use of water. If stretched while drained the hose can quickly retract and cause bodily harm. Do not stretch the hose.
- The expandable Hose is intended to be drained after each use. Do not leave the hose under pressure when not in use. Drain the hose completely before storage, and store indoors during extreme hot or cold temperatures. Do not leave hose in the sun for extended periods of time.