

REMINGTON®

HC4240, HC4250

Use and Care Guide



Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits:
Proof of Ownership • Product Protection • Product Registration • Special Offers
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following; read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

- Do not use in area that can be dropped into a sink or bath while plugged in.
- Make sure the power adapter and cord do not get wet. Do not plug or unplug the appliance with wet hands.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in the shower while plugged in.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink while charging or plugged in.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:


- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by the manufacturer.
- Keep the cord away from heated surfaces.
- Never operate this appliance with a damaged cord or plug, if it is not working properly, if it has been dropped or damaged.
- Do not store in shower or tub.

- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Make sure the cord is disconnected from the clipper while storing. Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Always attach plug to appliance and then the adapter to the outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the clipper for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- Dispose of batteries properly. Do not incinerate. Batteries may explode if overheated. Do not wrap in metal or aluminum foil. Wrap in newspaper before discarding. It is suggested that you contact local battery redemption site(s) in your area.

SAVE THESE INSTRUCTIONS

Product Features

Remington® hair clippers provide a quick and easy way to create professional-looking haircuts. To help you create those styles, and to extend the life of your hair clipper, please read all instructions before using.

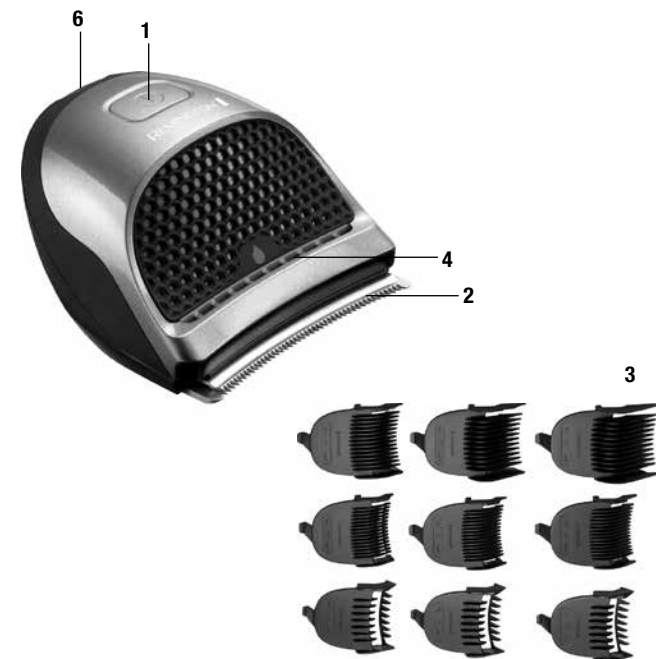

- On/off switch
- Removable blade set
- Attachment guide combs
- Washout port
- Travel pouch (not shown)
- Charging indicator
- Cleaning brush (not shown)
- Oil bottle (not shown)
- Adaptor (not shown)

Items included	Barber Grade Number (if applicable)	HC4240	HC4250
1.5mm guide comb	#0 (1/16")	x	x
2mm guide comb	-		x
2.5mm guide comb	-	x	x
3mm guide comb	#1 (1/8")	x	x
4.5mm guide comb	-		x
6mm guide comb	#2 (1/4")	x	x
9mm guide comb	#3 (3/8")	x	x
12mm guide comb	#4 (1/2")	x	x
15mm guide comb	#5 (5/8")		x
Cleaning brush	-	x	x
Oil bottle	-	x	x
Adaptor	-	x	x
Travel Pouch	-		x

Removable Blade

- To remove blade, hold the clipper with front of blade teeth facing away.
- Push the blade cartridge out, using the thumb cut out on the back of the clipper.
- The blade can be easily brushed or rinsed for cleaning (see Cleaning and Maintenance section).

To Install Blade

- To reattach blade, slide cartridge back into clipper body until it clicks.
- When pushing blade back into position, ensure that you do not push on the metal blades; there is a plastic portion of the blade cartridge that should be pushed in.

Attaching Guide Comb

- Guide combs should be installed by first hooking the blade teeth to front side of guide comb. Then press the back of the guide comb down until it snaps into place.
- Ensure comb is attached before beginning to cut hair.
- To remove, pull the snap tab on back side of guide comb and pull the comb off.

How to Use

Charging Your Hair Clipper

Note: Before using your clipper for the first time, charge the unit for 4 hours.

- Clipper must be turned off.
- Insert the adapter plug into the clipper and plug the adapter unit into a power outlet. The indicator light will blink to indicate that it is charging. The indicator light will stop blinking and stay lit when the clipper is fully charged.
- The clipper will be fully charged in 3–5 hours. A full charge provides 40 minutes of cordless use.
- Do not allow to charge for an extended period of time.
- If the clipper has not been used for a month or longer, it is advisable to recharge it for 3–5 hours.
- To preserve the life of the batteries, discharge them by running the clipper until the blades stop. Switch off and fully recharge. Do this every six months.
- Charge the clipper at temperatures between 40°–90°F.
- Lithium Ion batteries included. See battery removal section for proper disposal of batteries.

Instructions For Cutting Hair

- The clipper's ergonomic design provides many different ways of holding the clipper in use. Recommended ways of holding the clipper can be seen below.



Fig. 1



Fig. 2



Fig. 3



Fig. 4

- For clipping the top of the head (see fig. 1).
- For clipping the back of the head (see fig. 2).
- For clipping the sides of the head (see fig. 3).
- For detailing (see fig. 4).

- For even cutting, allow the comb attachment/blade to cut its way through the hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum comb attachment.
- For one all over cut length, attach the desired guide comb and slowly guide the clipper through the hair against the direction the hair normally grows.
- Remove the guide comb. To produce a clean straight line at the sideburns and the base of the neck, reverse the hair clipper. Place the reversed clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

The following instructions are for those users who want different trimming lengths on the sides, back and top of the head

STEP 1 – Nape of the neck

- Use the 3mm or 6mm comb.
- Hold the clipper with the blade teeth pointing upwards. Begin starting at the center of the head at the base of the neck.
- Slowly lift the clipper, working upwards and outwards through the hair, trimming just a little at a time.

STEP 2 – Back of the head

- With the 9mm or 12mm comb, cut the hair at the back of the head.

STEP 3 – Side of the head

- With the 3mm or 6mm comb, trim sideburns. Then change to the longer 9mm guide comb and continue to cut the top of the head.

STEP 4 – Top of the head

- Use the longer length 12mm or 15mm comb to cut hair on top of the head against the direction in which the hair normally grows.

STEP 5 – The finishing touches

- Use the clipper without an attachment comb for close trimming around the base and sides of the neck and around the ears.
- To produce a clean straight line at the sideburns, reverse the hair clipper.
- Place the reversed clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

Cleaning and Maintenance

Cleaning and Maintaining Your Clipper

After each use:

- Brush the accumulated hair from the cutters.
- Rinse blade.

Rinsing your blades

- Turn clipper on and rinse blades under running water.
- Turn off clipper and detach blades. Rinse the inside of the blades.
- Ensure all loose hairs are removed from the blades.
- Once blades are cleaned, ensure the blades and unit are thoroughly wiped dry.

Caution: Do not rinse when clipper is plugged in.

- Place a few drops of clipper oil onto the blades gliding surface. Wipe off excess oil. See below under “Blades” for oiling instructions.

Cleaning Cautions:

- Do not use liquid cleaners or harsh corrosive chemicals on the cutters or clipper body.
- Unplug the clipper from the power outlet when not in use and when cleaning.

Storage

- Always store this appliance and cord in a moisture-free area.
- Do not wrap the cord around the appliance.
- Do not store in temperatures above 140°F.

Blades

- It is recommended to oil the blades after every use.
- Place 2 to 3 drops of lubricating oil on the moving blade and turn on the clipper. The oil should distribute on its own. Wipe off any excess oils.

Troubleshooting

Clipper cutters do not move:

- The cutting unit may be dirty and clogged. Clean the unit as directed in Cleaning and Maintaining section.
- Always clean and oil the blade and clipper before storing.

Clipper does not hold charge:

- Fully discharge battery by running clipper until it stops, then follow recharging instructions (see section on charging your hair clipper).

Clipper does not work when turned on:

- Clipper must be charged for a full 3–5 hours.

U.S. and Canada residents: To order accessories, contact us at 800-392-6544, visit us at RemingtonProducts.com, or visit your local retailer.

Battery

Battery Removal

When your rechargeable clipper reaches the end of its useful life, the Lithium ion batteries must be removed and recycled or disposed of properly in accordance with your local and state requirements.

Battery Removal instructions

- Ensure device is unplugged from any electrical outlet and discharged of all power.
- Detach the blade cartridge from the trimmer.
- Remove the painted panel from the top of the clipper by prying at the seam where it meets the rubber, working from the top and down each side all the way down to the blade set until it can be taken off.
- Remove the two screws from the top body housing
- Starting at the rubber seam on either side of the charge indicator lens, pry open the seam, working back and forth from one side to the other, little by little, following the seam as it stretches from the indicator lens to the blade set until the top shell has been pried apart all the way from the rest of the clipper.
- Pry the top inner housing up and out of the lower main trimmer body.
- Remove the two screws from the top of the circuit board.
- Pull upward firmly on the front of the circuit board to create room to remove the battery.
- Cut the exposed black and red wires coming off of each end of the battery.
- Pry the battery out of its holder.
- Dispose of the battery safely and responsibly.

Warranty

Limited Five Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for the life of the product. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, DeForest, WI 53532. For more information call 800-736-4648 in the US or 800-268-0425 in Canada.

Warranty excludes:

- The blades and storage case are not included in the limited five year warranty.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear and breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO THE LIFE OF THE PRODUCT.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. and Canada.

Remington Guarantees Satisfaction After 60 Days!

Remington Men's Shave and Groom 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® branded Men's Shave and Groom product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. and Canada.

*Applies to US and Canadian customers' returns only.

**Terms and conditions apply.

Terms and Conditions

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® branded Men's Shave and Groom product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at RemingtonProducts.com/60day.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4–6 weeks to receive your refund by check.

Questions or comments: Call 800-736-4648 in the US or 800-268-0425 in Canada or visit RemingtonProducts.com.

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

Dist. by:
Spectrum Brands Canada Inc.
131 Saramia Crescent
Vaughan, ON L4K 4P7

© Registered Trademark of Spectrum Brands, Inc.

© 2017 Spectrum Brands, Inc. 6/17 18285-00

Made in China.

T22-0003515-B

Contains a listed adaptor.