




# USER INSTRUCTIONS

## **WARNING :**

1. Do not place in humid environment or expose to rain. Avoid severe collisions.
2. Keep the product away from high temperature and open flame environment to prevent dangers such as battery explosion.
3. Do not open the cabinet of the product, or it will cause machine damage and other accidents.
4. For maintenance, contact the service station or professional personnel if needed.
5. If any debris or liquid falls into the device, cut off the power immediately. It should only be used after inspection by a professional.
6. Can only be replaced with the same or equivalent type of battery.
7. In order to avoid charging issues, the product must be charged with the original USB cable. Accidents and machine damage caused by using other charging cable will not covered by warranty.

## THE OPERATION PANEL

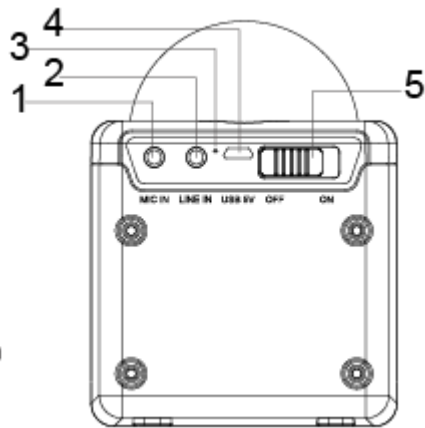

1. Mic in
2. Line in
3. Charging Indication
4. USB 5V Charging Port
5. Power OFF/ON

## BLUETOOTH

Slide the power switch to the ON position, "Bluetooth mode, pairing" will be heard. Place the speaker and Bluetooth device (phone or music device) no further than 10 meters apart. Activate the Bluetooth function on your Bluetooth device. Once you have activated Bluetooth on your device, select the pairing name "EARISE.T12" from the list of available Bluetooth devices.

## AUX IN

1. There is a "LINE IN" jack on the speaker for the connection of non-bluetooth devices.
2. Connect the included AUX cable to the speaker and connect the other end to your device.
3. Select the music on your device and play.

**Note:** When AUX cable is connected to the T12, it will disconnect from your Bluetooth device automatically.

## MICROPHONE

You can plug the included microphone into the mic in jack on the rear of the speaker. The microphone volume is fixed at an optimal level.

**Note:** If the microphone is placed too close to the speaker, you may hear loud interference sound.

## **LED DISCO LIGHT**

Slide the power switch to the ON position. The disco light will be turned on. It will flash with the rhythm of the music. Slide the power switch to the middle position. The light will be turned off.

**Note:** The flashing lights may potentially trigger seizures for people with photosensitive epilepsy.

## **SPECIFICATION**

Power Output: 3W

S/N Ratio:  $\geq 60\text{dB}$

DC Input: 5V

R. Frequency: 90Hz-20KHz

Li-ion battery: 3.7V / 1200mAh

Dimension: 3.15" x 3.23" x 4.17"(L\*W\*H)

## **WHAT'S IN THE BOX**

1\* T12 Karaoke Speaker

1\* Wired Microphone

1\* USB Cable

1\* AUX Cable

1\* User Manual

2\* Hook Stickers

## **WARRANTY**

EARISE guarantees one and a half year warranty and 60 days hassle-free return. We provide lifetime technical support. Please reach us via [support@earise.cn](mailto:support@earise.cn).