

Will My Saw Fit the Bora® Saw Plate™?

Check these 3 things to ensure compatibility:

- 1** Blade guard to edge of saw plate - width must be between 3 ½ in. and 5 ¼ in.
- 2** Front lip on saw plate - ideal width > ¾ in. (space is needed for clamps to lock in place)
- 3** Open space on motor side of saw plate for one locking clamp

