



Safety Information

• Before use, be sure to carefully read this manual for safety issues and to ensure that you use this product correctly. Be sure to follow information printed in this manual when using this product.



In order to avoid any electrical shock, short-circuit, burns, or possibly cause a fire:

- Do not disassemble. This product may only be disassembled by qualified repair technicians. To request repair, see Warranty Page at the back of this manual.
- Do not use if the power cord or plug is damaged, or if the plug is not fully inserted into the outlet.
- Do not scratch, damage, modify, forcibly bend, pull, twist, bind/clamp, or place heavy objects on the power cord.
- Do not insert metal objects, such as pins, wires, or other foreign materials into any gaps of the product.
- Do not allow children to use this product by themselves, and keep product and power cords out of the reach of small children.
- Use only with the designated power supply 110 120 V.



When cleaning the product, be sure to unplug the power cord from the outlet.

Do not use in area with high humidity (85% or higher).

Do not use in area where the mist directly contacts furniture, bedding, walls, curtains, ceiling, or other objects.

Do not place on slanted surfaces, high locations such as bookshelves, or on unstable surfaces.

Do not place the humidifier directly onto a carpet or other object with soft fibers or a thick pile. These could block the vent hole from performing properly and can cause the unit to malfunction or leak.

Do not block the mist outlet.

Fill the reservoir tank using only clean cool tap water.

Do not use hot water. Use of hot water that is 104°F or higher can cause the product to deform and malfunction.

Never put aroma oil or other fragrances into the water reservoir tank as this can damage the humidifier.

Do not wipe product with turpentine/benzene, thinner or other chemicals, since this can ruin the sheen.

When unplugging the power cord, always unplug by grasping the power plug, not by pulling on the power cord. If the supply cord is damaged, it must be replaced by the manufacturer, or its service agent.

Spill out the water when not using the humidifier or when moving the appliance.


Replace the water in the reservoir tank with fresh water every day. Regularly maintaining the inside will ensure that the product is always clean and ready for use.


Use without attaching the cover could result in water spillage. Do not remove the cover unless cleaning the hybrid humidifier

Do not place cell phones, computers, or other electronic devices near the humidifier. The area around the humidifier can become very humid while the humidifier is operating and these items are sensitive to humidity. Product should be placed at least 6 feet away from these objects.

Take care that the product does not freeze. If the product is placed in a area subject to freezing temperatures, spill out all the water inside.

Parts and Their Functions

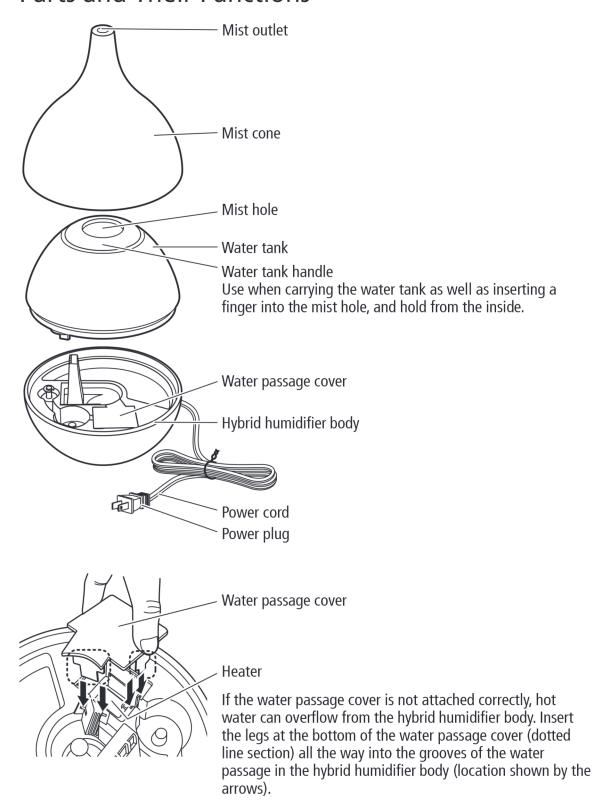

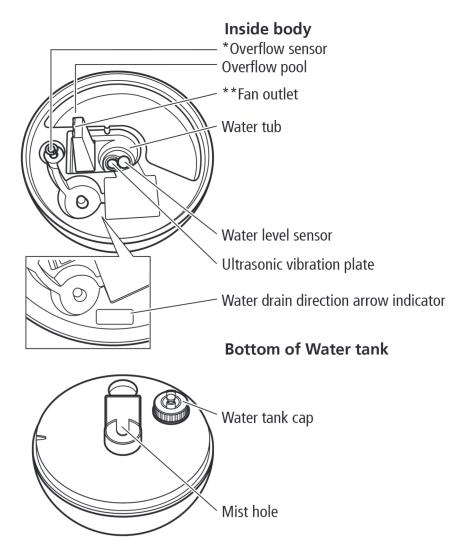

* Overflow sensor

An overflow occurs when the water level is excessively high. The overflow sensor will be activated and the heater operation will stop. This is to prevent water from overflowing into the electrical part of the unit. If water has collected in the overflow pool, drain it. When the water level in the water passage returns to normal, restart operation.

**Fan outlet

Take care not to get water into the fan outlet or overflow drain when filling with water, draining out water or cleaning.

 
Accessories:



Aroma base



Replacement felt \times 2




Replacement ceramic disc set IMM-DISC001

Operating Instructions for Hybrid Humidifier

1. Place the hybrid humidifier on the aroma base.

Insert the brackets on the aroma base all the way into the corresponding holes on the bottom of the hybrid humidifier.

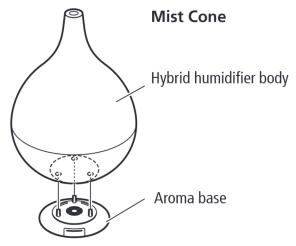

- 2. Place the hybrid humidifier with the connected aroma base on a flat sturdy surface.
- 3. Turn the mist cone at the top of the hybrid humidifier to remove it.
- 4. Take out the water reservoir tank from the hybrid humidifier, remove the water cap and fill with room temperature, clean tap water.
- 5. Firmly tighten the water tank cap, wipe up any spilled water, and turn it over to check that no water is leaking.
 - *Be careful when removing the water tank since there might be some water remaining there and can possibly will spill out. Prepare towels beforehand so that the hybrid humidifier and the floor do not get wet.
- 6. Place the water tank into the hybrid humidifier so that it fits securely. Firmly cover the mist cone onto the hybrid humidifier.
- 7. Plug the power cord plug firmly into the outlet.


WARNING

If you are going outside or will be away from the hybrid humidifier for an extended period of time, unplug the power cord from the outlet. Otherwise, you could forget to turn it off and cause a fire.

When going to bed during the winter, if your heat is turned off and the room temperature drops below 59°F, continued misting operation can result in condensation. This can cause the hybrid humidifier body and the floor to get wet.

If using in environments where the room temperature is expected to drop below 59°F or the humidity is expected to be above 60% when going to bed, either set misting operation to M (Medium) or L (Low), or stop the misting operation altogether.

Power button operations:

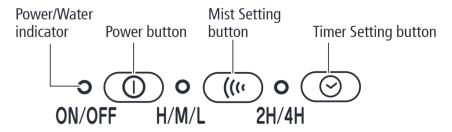

- 1. When the Power button is pressed, the Power/Water indicator (ON/OFF) is lit GREEN, the misting operation starts after about two minutes. The delay is due to the water temperature heating up to at least 140°F for sterilization before starting the misting operation.
- 2. To stop Press the Power button again. After misting operation is stopped, the fan will run for about one minute before the hybrid humidifier comes to a complete stop.
 - Use the humidifier in a location that is at least 20 inches away from walls, bedding, curtains, furniture, and other objects.

