Do not fully tighten the bolts until all bolts are started. Once all bolts are inserted, then go back and tighten all the bolts.

## **HARDWARE**

ADIRONDACK COLLECTION
HAMILTON CHAIR
ASSEMBLY INSTRUCTIONS













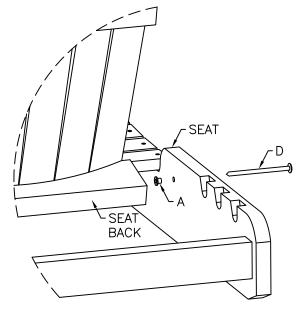


- 1) Attach seat back to seat with bolt D and washer A
- 2) Repeat on other side




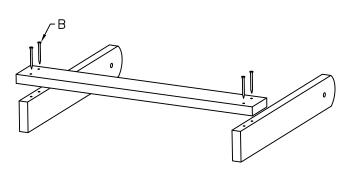


3) Attach Back Support Rail to Back Support Sides with four B screws

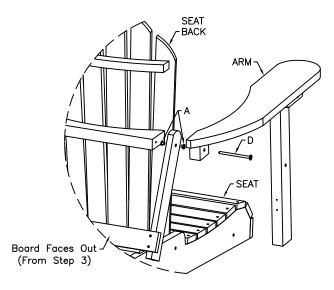

4) Attach Arm and Back Support to Back with bolt D and two A washers.

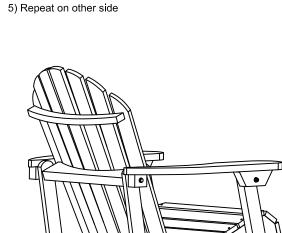

8) Attach Front Leg Support with four B screws. Enjoy your Highwood Chair!

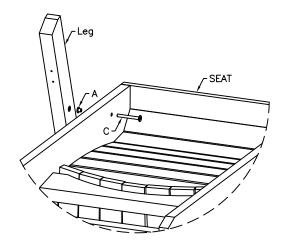

6) Turn chair over. Attach Leg to Seat using bolt C and washer A. 7) Repeat on other side.

## **IMPORTANT NOTES**

NEVER adjust the level of recline while you are sitting in the chair, or while anyone else is in the chair. Always adjust with an empty chair and ensure that the back-support is completely secure in the recline-slots on each side of the chair.

To fold the chair, lift the back-support and push down on the seat back gently... the chair will collapse down to floor level.

CHL1 12.12.13



For information on Care and Cleaning your *highwood®* product visit www.highwood-usa.com/care.html Visit our Website and Facebook page to see more *highwood®* products!