# WORKUP INSTALLATION / OWNERS MANUAL



**MODEL: XAFD-M3** 

NEED HELP? CONTACT US: Monday – Friday, 9 am – 5 pm PST 657-341-0362 or Email us: cs@scsources.com

WorkUP Supply Chain Sources LLC., 339 N Berry St., Brea, CA 92821 657-341-0362



- Do not fully tighten screws until completely assembled.
- Place desk on a level surface during operation, installation, and assembly.

## **TOOLS YOU MAY USE (NOT REQUIRED) - 2 PERSON RECOMMENDED**



Drill



Allen Bit




2x persons



Wrench

### **PARTS / HARDWARE**



1. Desk Body



2. Desk Feet x2



3. Desk Foot Brace x2



Screwdriver




(M8 x16)



H x 16 (M6 x 16)



4. Desk Brace



5. Desk Pole x2

# STEP 1

Desk Feet Assembly


Carefully stand up and align each **DESK POLE** with the **DESK FEET** pre-drilled screw holes facing each other.


Secure using the provided screwdriver and (H) screws **4x** on each side.

Align the **DESK POLE** and **DESK FOOT BRACE** pre-drilled screw holes facing each other.

Secure using the provided screwdriver and (**H**) screws **4x** on each side.



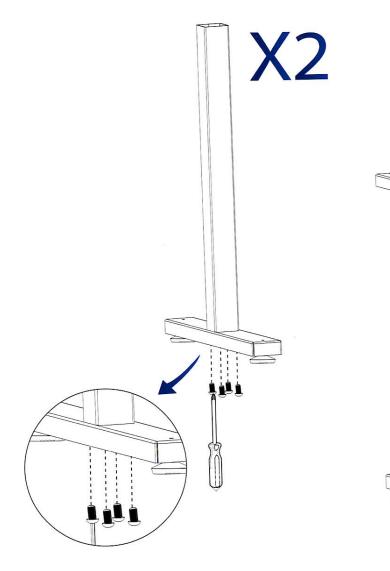

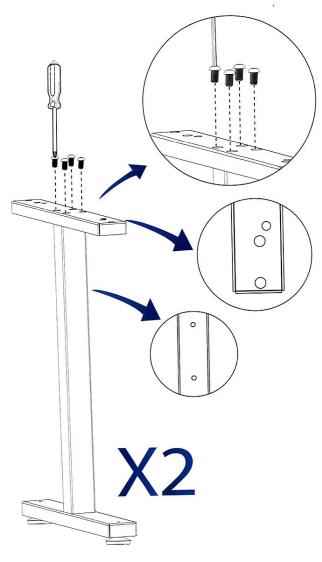



# STEP 2


**Desk Body Assembly** 

Align the **DESK BODY** with the previously assembled **DESK FEET** 

Make sure the **DESK BODY** is raised to allow acess to the pre-drilled holes.

Secure on each side using the provided screwdriver and (**G**) screws **2x** on each side.



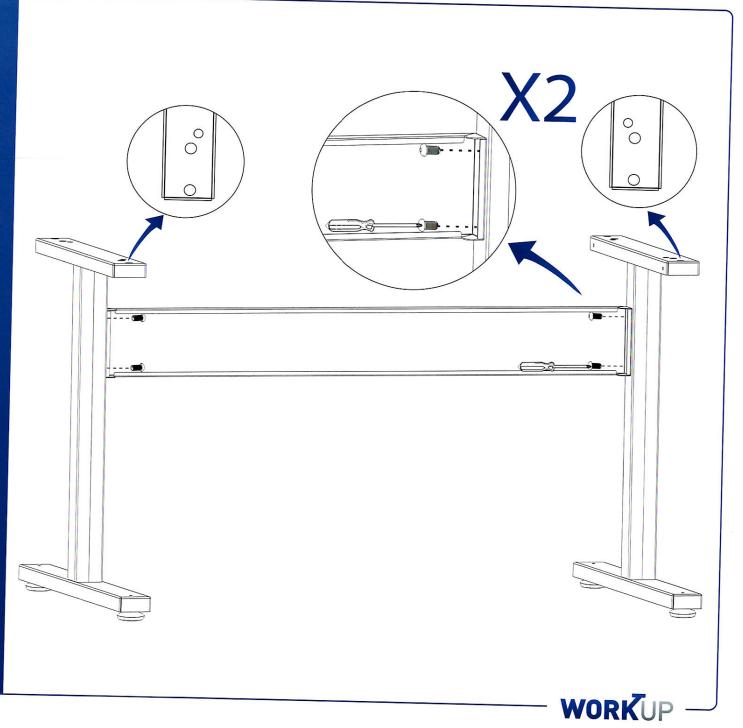

# STEP 3

Desk Body Assembly


Align the **DESK BODY** with the previously assembled **DESK FEET** 

Make sure the **DESK BODY** is raised to allow acess to the pre-drilled holes.

Secure on each side using the provided screwdriver and (**G**) screws **2x** on each side.





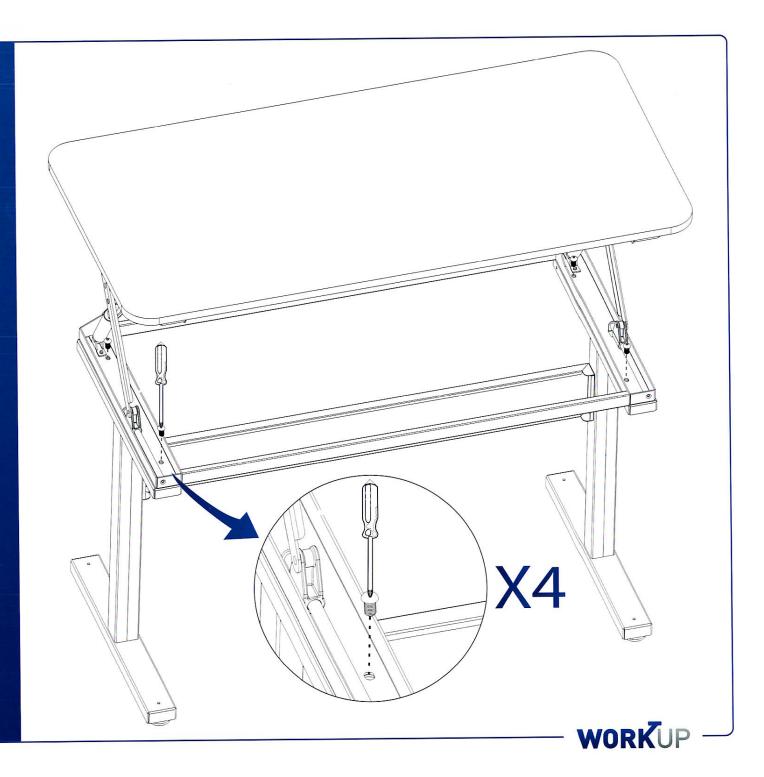

NEED HELP? CONTACT US: Monday – Friday, 9 am – 5 pm PST 657-341-0362 or Email us: cs@scsources.com

WorkUP
Supply Chain Sources LLC.,
339 N Berry St., Brea, CA 92821
scsources.com
657-341-0362