




1 Preparing Door and Touchscreen Escutcheon

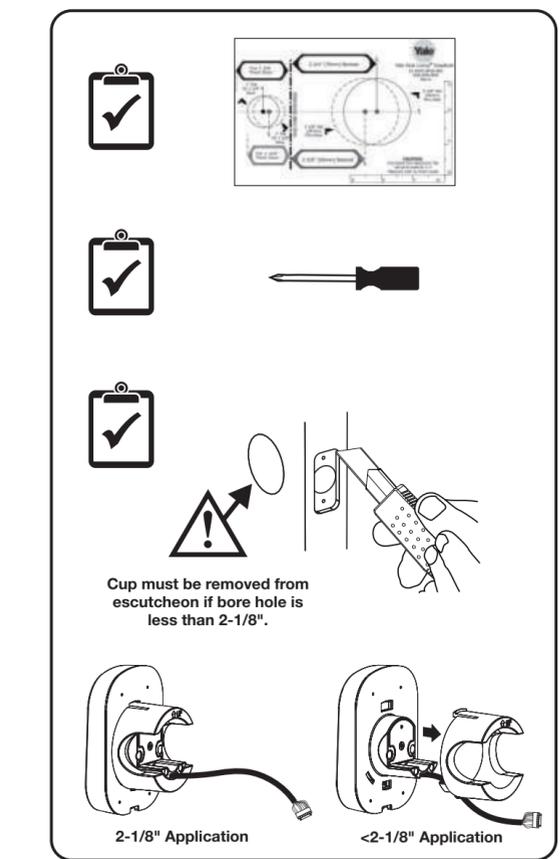


1 Installing Latch & Strike Plate

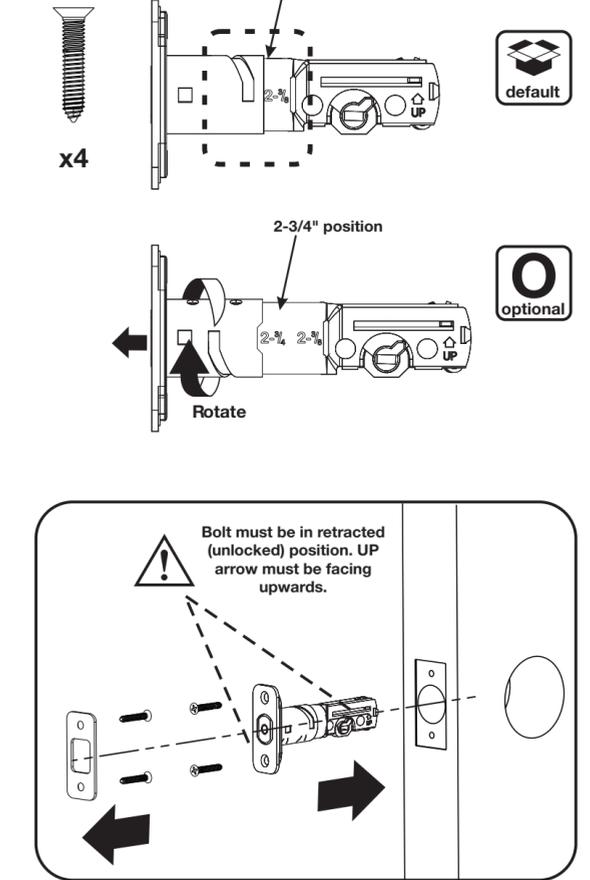

2 Installing Touchscreen Escutcheon


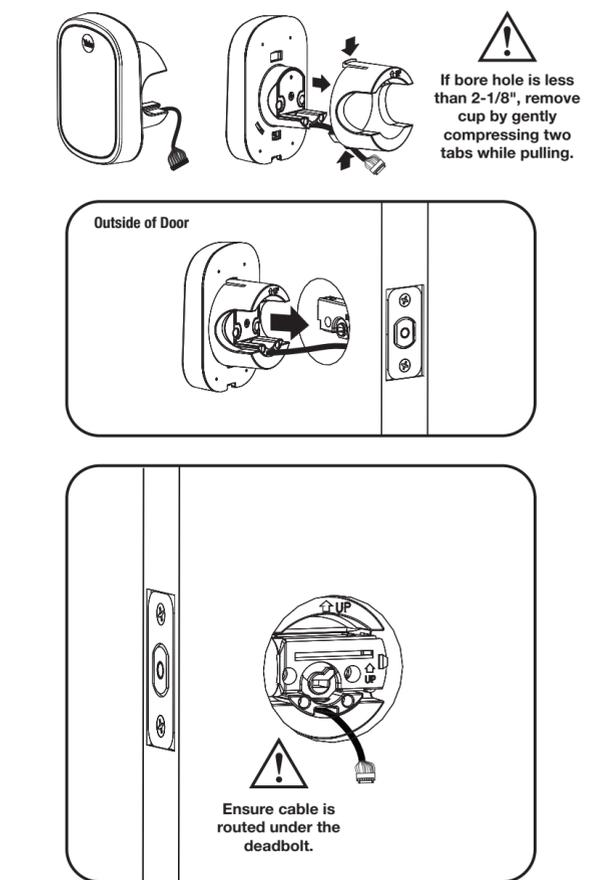


3 Installing Interior Mounting Plate


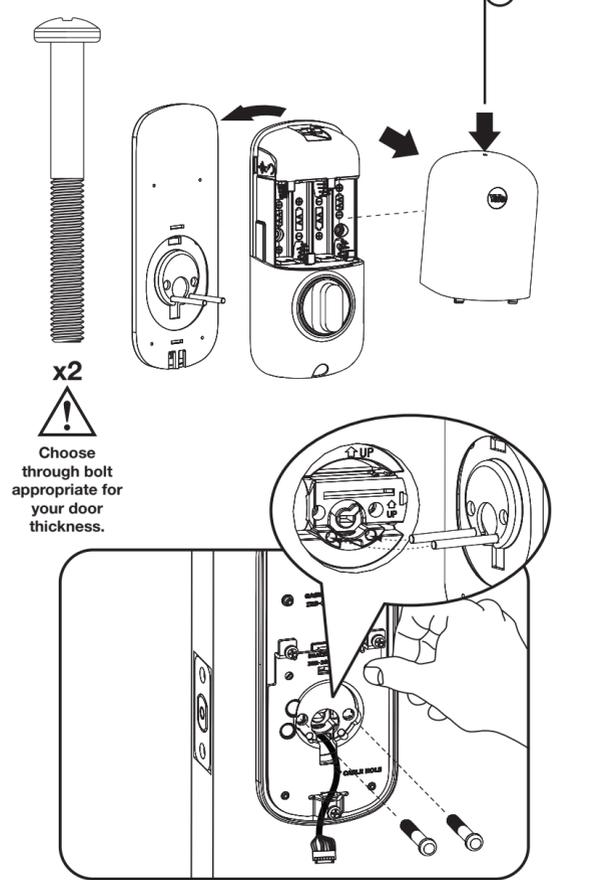


FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN DAMAGE TO THE PRODUCT AND VOID THE FACTORY WARRANTY
Master Lock Company LLC and its affiliates P/N YRD157-MNL-0001 REV A



4 Attaching the Cable Assembly

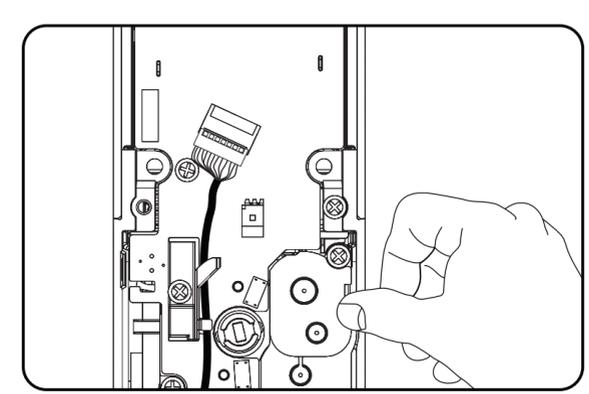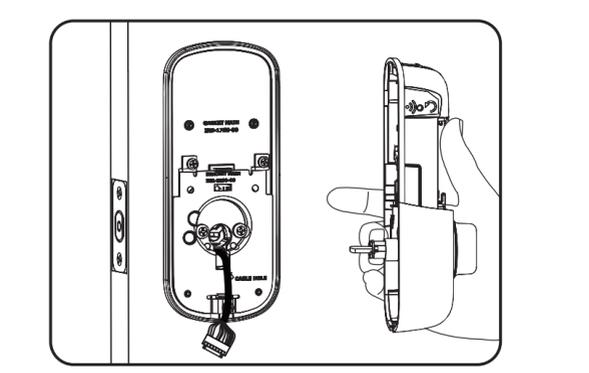



5 Installing Interior Escutcheon

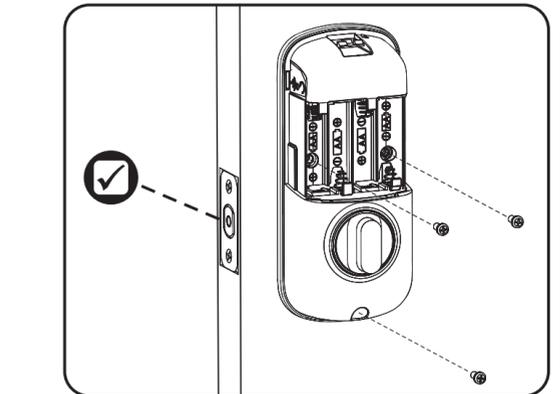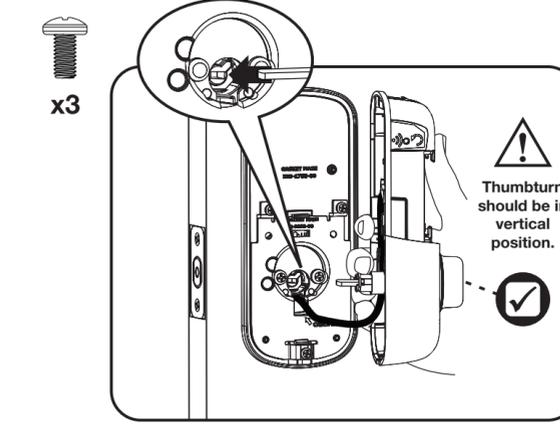


Testing Operation

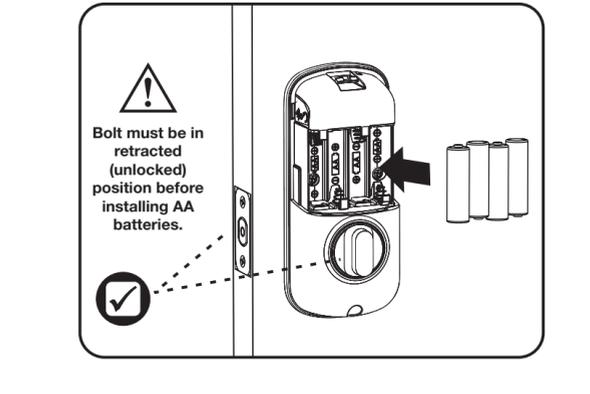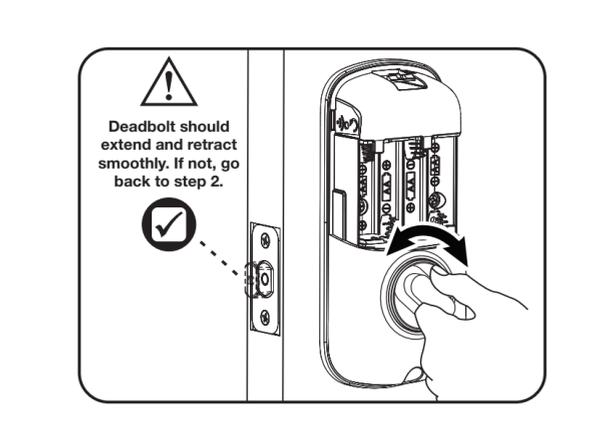

Initial Programming

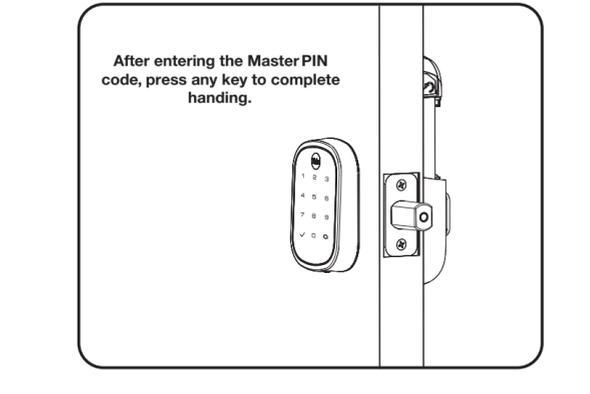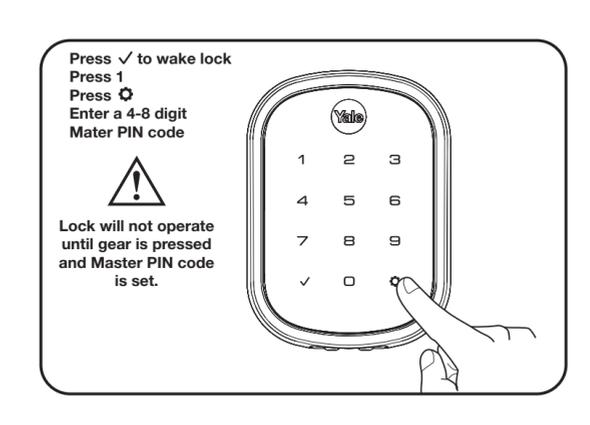

6 Installing Cover

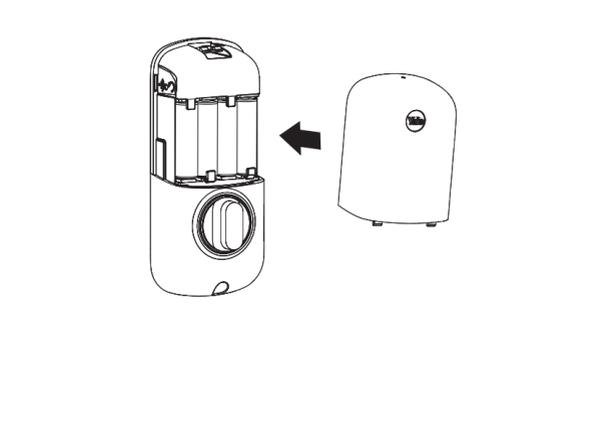

Congratulations, you've installed the **Yale Code™ SL** Key-Free Touchscreen Deadbolt (YRD157)! Turn sheet over for Programming Instructions to customize your product.

